

Abstract geometric lines forming various shapes and patterns, primarily in the upper left and center of the page.

**CEF UME  
BRAINSTORM  
INSTALLATION  
INSTRUCTIONS**

## STEP 1

**Remove flat plate from Undermount Electrical unit by removing the 4 Phillips head screws.**



## STEP 2

**Attach new angled mounting bracket using the same Phillips head screws removed in Step 1.**




## STEP 3

**Choose preferred attachment location (with electrical oriented as shown in the image on the right).**



## STEP 3

**Attach unit in preferred location using the 3 self tapping screw provided.**

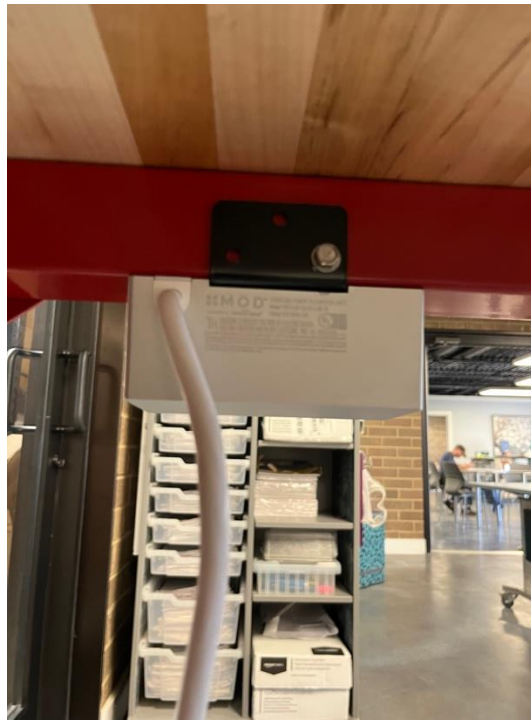

INSTALLATION  
COMPLETE!

